HYDROFLOW



Penstocks



- Lightweight range of wall mounted penstocks
- Easy and quick installation – no need for grout between frame and wall
- Corrosion resistant
- Robust and rigid construction
- UV stable
- Minimal maintenance required
- Manufactured to DIN 19569-4 (class 5)

HDPE Penstocks from Fernco provide a high strength, easy to install solution to control the flow of water and wastewater.

Penstocks, in their basic form, are permanent water gates that control the flow of water from one area to the next, which can be manually adjusted to produce the desired flow. They are often used on Waterways, Power Plants, Industrial Effluent Plants, Hydro Power, Sewerage/Wastewater Treatment Plants, Drainage and Flood Control.

With a core range manufactured from HDPE (High Density Polyethylene), Fernco's range offers considerable benefits over other materials including:

1. Operational

The range is considerably lighter than alternatives, resulting in easier installation with no grout required between frame and wall.

2. Maintenance

The product mechanism is self lubricating between the frame and the door resulting in a longer life product. The range has leakage rates that are better than those required in DIN 19569-4 class 5.


All Fernco Penstocks come with a BS Cap supplied.







Product Specification

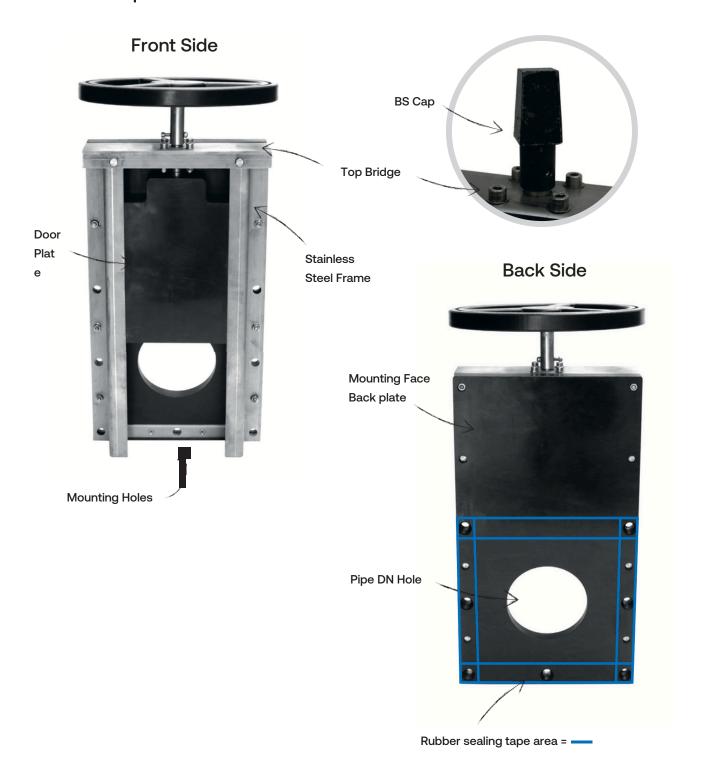






Construction Materials

| Component | Standard materials Grade 316 stainless | Options |
|-----------------------------|--|------------------------------------|
| Frame | steel (1.4401) HDPE 500 HDPE 300 Grade | Grade 316 stainless steel (1.4401) |
| Door plate | 316 stainless steel (1.4401) Grade 316 | |
| Backing plate | stainless steel (1.4401) TR25 x 7.5 PTFE POM | |
| Reinforcements | (self lubricating) Grade 316 stainless steel | |
| Non-rising spindle | (1.4401) EPDM 6m | |
| Spindle bearing | | |
| Door nut | | Bronze |
| Bolts & nuts | | |
| Integrated Seal | | |
| On and off seating pressure | | |

Standard Series Product Range

| CODE | DIAMETER (Ø) | A (MM) | B (MM) | C (MM) | D (MM) | E (MM) | F (MM) | G (MM) | H (MM) | PRESSURE (MWC) | WEIGHT (KG) | MOUNTING SET |
|--------|-----------------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-------------------|----------------|-----------------|
| FPS100 | 100 | 242 | 437 | 70 | 37.4 | 44. | 100 | 96 | 16 | 6 | 10.9 | FPSMS-01 |
| FPS150 | 150 | 294 | 537 | 70 | 36.5 | 5 | 100 | 96 | 16 | 6 | 14.3 | FPSMS-01 |
| FPS200 | 200 | 342 | 637 | 70 | 37.4 | 44. | 100 | 96 | 16 | 6 | 17.6 | FPSMS-01 |
| FPS250 | 250 | 394 | 737 | 70 | 37.5 | 5 | 100 | 96 | 16 | 6 | 22 | FPSMS-01 |
| FPS300 | 300 | 442 | 837 | 70 | 37.4 | 44. | 100 | 96 | 16 | 6 | 26.8 | FPSMS-01 |

| CODE | DIAMETER (Ø) | A (MM) | B (MM) | C (MM) | D (MM) | 44. (MM) | F (MM) | G (MM) | H (MM) | PRESSURE (MWC) | WEIGHT (KG) | MOUNTING SET |
|--------|-----------------|-----------|-----------|-----------|-----------|-----------------|-----------|-----------|-----------|-------------------|----------------|-----------------|
| FPS400 | 400 | 622 | 1080 | 117 | 53 | 44 44. | 138 | 132 | 16 | 54.4 | 10.9 | FPSMS-02 |
| FPS450 | 450 | 670 | 1180 | 116 | 53 | 44. 44 -5 | 138 | 132 | 16 | 65.5 | 14.3 | FPSMS-02 |
| FPS500 | 500 | 718 | 1280 | 115 | 52 | 44 | 138 | 132 | 16 | 2.3 | 17.6 | FPSMS-02 |
| FPS600 | 600 | 820 | 1480 | 116 | 53 | 44 | 138 | 132 | 16 | 91.7 | 22 | FPSMS-02 |

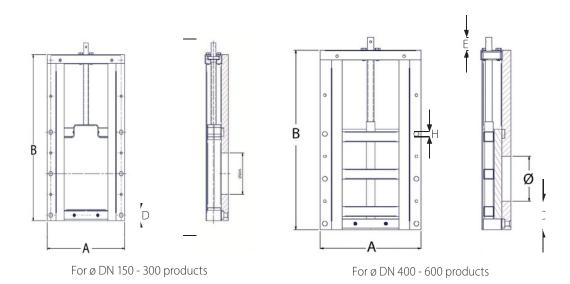





Accessories & Installation

| uide Bracket 0.53 Penstock Handwheel enstock BS Cap Telescopic Extension | 3.5 0.53 1.52 |
|---|--|
| enstock BS Cap Telescopic Extension | |
| | |
| pindle 500-750mm Telescopic Extension | |
| pindle 750-1000mm Telescopic Extension | |
| pindle 1000-1500mm Telescopic Extension | 1.24 |
| pindle 1500-2000mm Telescopic Extension | 1.62 |
| pindle 2000-2500mm Telescopic Extension | 2.27 |
| pindle 2500-3000mm Telescopic Extension | 3 |
| pindle 3000-3500mm Telescopic Extension | 3.64 |
| pindle 3500-4000mm Telescopic Extension | 4.1 |
| pindle 4000-4500mm Telescopic Extension | 5.02 |
| pindle 4500-5000mm | 6.05 |
| | 7.28 |
| | |
| pi pi pi | indle 750-1000mm Telescopic Extension indle 1000-1500mm Telescopic Extension indle 1500-2000mm Telescopic Extension indle 2000-2500mm Telescopic Extension indle 2500-3000mm Telescopic Extension indle 3000-3500mm Telescopic Extension indle 3500-4000mm Telescopic Extension indle 4000-4500mm Telescopic Extension |





Penstock Guide bracket





Hand Wheel





Introduction

The Fernco HDPE penstock is constructed using HDPE and Grade 316 stainless steel (1.4401).

The penstock has a vertically moving door manufactured in HDPE with stainless steel supports. The door incorporates an EPDM rubber lip seal to provide a seal against the back plate and is guided within a stainless steel frame with HDPE guides.

A rubber sealing tape is secured between the frame and the mounting wall, which is compressed during installation to provide a seal.

Handling

The HDPE Penstock should only be transported when laid flat with the door plate facing upwards. It can then be lifted by means of suitable equipment.

Where chains or slings are used for handling purposes, the frame should be protected using cloth sacking or similar material.

Fully trained personnel should carry out all necessary lifting.

Storage

It is recommended to store the penstock laid down flat with the door plate facing upwards, free of dust, dirt and moisture.

Mounting Set:

- 1) Rubber sealing tape (5mm thick)
- 2) Chemical anchor capsules
- 3) Fixtures and accessories

Penstock Installation Sequence

Before commencing installation, check that the civil work

is correct to all appropriate drawings and that there are no obvious obstructions or undulations on the mounting wall. The performance of the sealing tape will be affected if the civil structure is not flat.

It is recommended that the mounting set is purchased with the penstock for ease of installation.

Tools Required

- Appropriate PPE
- Utility Knife
- Marker Pen
- Suitable Drill
- 14mm Drill Bit
- 15mm Drill Bit
- Torque Wrench
- 19mm Socket Set8mm Socket Hex Key
- Hammer





1. Marking the Mounting Face

- 1. With suitable lifting equipment, lift the penstock and adjust it to ensure it is vertical and level.
- 2. Lower the penstock into the required aperture.
- Check and adjust the penstock into the correct position, ensuring the invert of the pipe is flush with the invert of the penstock opening.
- Mark all of the mounting holes.

- 5. Penstocks DN400 and over have additional mounting holes above the penstock opening. These are accessed by fully closing the penstock. Specific Drop In Anchors are supplied in the mounting kits for these sizes and are installed using an anchor setting tool that is available for purchase separately (T-M12PUNCH).
- Remove the penstock.

2. Procedure for installing Chemical Anchor Attachments

Standard Chemical Anchors Set comprising of:

- Stainless Steel M12 Threaded Stud
- Chemical Anchor Capsules
- Stainless Steel Nuts and Washers

- Using a 14mm drill bit, drill the mounting holes to a depth of 110mm in their required positions.
 - 1a) **DN400** and above Drop In Anchor Installation For the mounting holes above the door, using a 15mm drill bit, drill the holes to a depth of 55mm.
- Blow out the drilled holes using compressed air. (Warning: Suitable eye protection to be worn)
- 3. Insert a chemical anchor capsule into each hole.
 - 3a) **DN400** and above Drop In Anchor Installation Place the anchor inside the hole. Drive the anchor setting tool (or an equivalent device) into the anchor with a hammer, until flush with the anchor base.

- 4. Attach the M12 stud to a suitable drill.
- 5. Place the end of the stud into the hole, then in one motion operate the drill at high speed, and push the stud through the chemical anchor to the back of the hole. Once the back of the hole is reached, stop the drill to prevent resin escape.
- Carefully remove the drill from the stud. Take care not to move the stud.
- 7. During the curing time, move on to section 3 (see table 2 for cure times).

| MOUNTING KIT | NUMBER OF BOLTS | BOLT SIZE | DRILL BIT REQUIRED | DRILL DEPTH | TIGHTENING TORQUE |
|--------------|-----------------|-----------|--------------------|-------------|-------------------|
| FPSMS-01 | 7 | M12 | 14mm | 110mm | 25Nm |
| FPSMS-02 | 10 | M12 | 14mm | 110mm | 25Nm |

Table 1 - Mounting kit installation data

| TEMP °C | -15 to -10 | -9 to -5 | -4 to 0 | 1 to 5 | 6 to 10 | 11 to 20 | 21 to 30 | 31 to 40 |
|-----------|------------|----------|---------|--------|---------|----------|----------|----------|
| Cure Time | 30h | 16h | 10h | 45min | 30min | 20min | 5min | 3min |


Table 2 - Curing time data

3. Placing the Rubber Sealing Tape

- 1. Ensure that the penstock back plate is clean and smooth.
- The sealing tape has adhesive on one side with a protective layer over it. Cut the tape larger than necessary, then remove 4. the protective layer and fit it onto the frame.
- 3. The tape should now be cut to length and squared so that the corners connect properly.
 - Drill holes through the tape by using the mounting holes in the penstock as a guide.





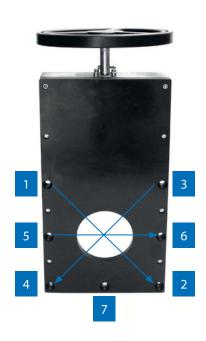

Installation Of An Extension Spindle

- 1. Remove the BS Cap.
- 2. Place the extension spindle over the spindle of the penstock.
- Place the upper bracket 150mm below the deck or the top
 of the spindle extension. Divide the other brackets over the
 length of the spindle extension (one additional bracket for
 every 3m).
- 4. Mark the mounting holes of the bracket(s) in such a way that the extension spindle is in the required position.
- 5. Remove the extension spindle.
- 6. Install the brackets as required.
- Reinstall the extension spindle; adjust the position of the brackets if necessary to ensure the proper alignment of the spindle extension.

4. Final Steps

- Place the penstock over the studs, then place a washer and a nut onto each stud and tighten by hand. If applicable, screw the corresponding threaded bolts into the anchors by hand.
- Once all washers and nuts have been placed, proceed to tighten the nuts evenly to the recommended torque. If applicable, also tighten the threaded bolts into the anchors. It is recommended that all fixtures are tightened following the number pattern illustrated in the image (25Nm with a Fernco Mounting Set)*. The sealing tape must be compressed evenly to ensure a good seal, however, the frame must not be allowed to deform.

*For Penstocks DN400+ there are additional anchor mounting holes. Tighten these within the number pattern, ensuring opposite mounting holes are selected when choosing the next hole.

Post-Installation Checks

To ensure effective operation, the following checks are recommended before leaving the installation site:

- a. Condition of the frame This can be distorted during the installation process if due care is not taken.
- b. Debris between the door and the frame at the invert –Remove all debris to ensure effective seal performance.
- c. Seal and Sealing Tape condition Check the seal and tape for any damage.
- d. Fixtures Tighten all fixtures where necessary.
- e. Misalignment of the extension spindle.

Note: DO NOT use excessive force when opening or closing a penstock door, as damage could occur.

Frequency of Inspection:

The inspection frequency should be based on the particular installation requirements. In an aggressive environment or in locations with large amounts of silt or debris, it is strongly recommended to increase the inspection/maintenance interval.





General Information

Quality, Standards and Approvals

Certified by the British Standards Institution (BSI) as a company of assessed capability, with a quality management system which meets the requirements of BS EN ISO 9001:2015

Fernco are the leaders in wastewater connection innovation; utilising the most advanced methods and techniques for precision-manufactured products, all of which comply with or exceed relevant British and European standards to ensure reliability and sustainability.

Environment

Operating Environmental Management Systems which are certified to ISO 14001: 2015.

Supply

All Fernco products are supplied through a national and global network of distribution and merchant partners. For stockist details, contact Fernco.

Technical Support

Hydroflow Civil have a team of product experts on hand to support all customers with technical support and advice.

Contact Hydroflow Civil:

Tel: +64 9 448 5844

Email: orders@hydroflowcivil.co.nz

Enquiries

Sales:

Tel: +64 9 448 5844

Email: orders@hydroflowcivil.co.nz